



Sika Services AG Tüffenwies 16 CH-8048 Zürich SWITZERLAND Eurofins Product Testing A/S Smedeskovvej 38 8464 Galten Denmark

CustomerSupport@eurofins.com www.eurofins.com/VOC-testing

VOC EMISSION TEST REPORT Indoor Air Comfort GOLD

12 October 2022

1 Sample Information

Sample reception

Sample name Sikasil® WS-605 S

Batch no. 3006532146

Stated production date 22/08/2022

Product type Joint sealant

02/09/2022

2 Brief Evaluation of the Results

Regulation or protocol	Conclusion	Version of regulation or protocol
French VOC Regulation	EMISSIONS DANS LUAIR INTÉRIEUR	Decree of March 2011 (DEVL1101903D) and Arrêté of April 2011 (DEVL1104875A) modified in February 2012 (DEVL1133129A)
French CMR components	Pass	Regulation of April and May 2009 (DEVP0908633A and DEVP0910046A)
Italian CAM Edilizia	Pass	DM 23 giugno 2022 n. 256, GURI n. 183 del 6 agosto 2022
ABG/AgBB	Pass	Ausschuss zur gesundheitlichen Bewertung von Bauprodukten (June 2021)
Belgian Regulation	Pass	Royal decree of May 2014 (C-2014/24239)
EMICODE	EC 1 PLUS	March 2022
Indoor Air Comfort	Pass	Indoor Air Comfort 8.0 of June 2022
Indoor Air Comfort GOLD	Fail	Indoor Air Comfort GOLD 8.0 of June 2022
Blue Angel (DE-UZ 123)	Pass	DE-UZ 123 for "Low-Emission Sealants for Interior Use", (January 2019)
BREEAM International	Exemplary Level	BREEAM International New Construction v6.0 (2021)
BREEAMNOR	Exemplary Level	BREEAM-NOR v6.0 New Construction (2022)

Full details based on the testing and direct comparison with limit values are available in the following pages Regarding pass/fail decision rule please see appendix

Peter Alexander Skov Analytical Chemist, MSc. Eng. Chemistry Rasmus Verdier Analytical Service Manager







Table of contents

1	Sample information	
2	Brief Evaluation of the Results	1
3.1 3.2	Applied Test Methods General Test References Specific Laboratory Sampling and Analyses	3 3 3
4.1 4.2 4.3 4.4	Test Parameters, Sample Preparation and Deviations VOC Emission Chamber Test Parameters Preparation of the Test Specimen Picture of Sample Deviations from Referenced Protocols and Regulations	4 2 2 2
5.1 5.2	Results VOC Emission Test Results after 3 Days VOC Emission Test Results after 28 Days	5 5
6 6.1 6.2 6.3 6.4 6.5 6.6 6.7 6.8 6.9 6.10 6.11 6.12	Comparison with Limit Values of EMICODE	9 9 10 11 11 11 12 12 13 14
7.1 7.2 7.3 7.4 7.5 7.6 7.7 7.8 7.9 7.10 7.11	Appendices Chromatogram of VOC Emissions after 3 Days Chromatogram of VOC Emissions after 28 Days Sampling Report How to Understand the Results Applied LCI and NIK Values Description of VOC Emission Test Quality Assurance Accreditation Uncertainty of the Test Method Decision Rules	15 15 16 17 18 19 21 21 21 21





3 Applied Test Methods

3.1 General Test References

Regulation, protocol or standard	Version	Reporting limit VOC [µg/m³]	Calculation of TVOC	Combined uncertainty ^s [RSD(%)]
EN 16516	2017 + A1:2020	5	Toluene equivalents	22%
ISO 16000 -3 -6 -9 -11	2006-2021 depending on part	2	Toluene equivalents	22%
ASTM D5116-10	2010	-	-	-
Specifications Indoor Air Comfort Gold	8.0 of June 2022	5	Toluene equivalents	22%
French VOC Classes	Decree of 03/2011 (DEVL1101903D) and arrêté of 02/2012 (DEVL1133129A)	2	Toluene equivalents	22%
French CMR	Regulation of April and May 2009 (DEVP0908633A and DEVP0910046A)	1	Toluene equivalents	22%
Italian CAM Edilizia	Decree 23 June 2022	2	Toluene equivalents	22%
AgBB (MVV TB/ABG)	June 2021 (2020/2019)	5	Compound Specific	22%
Belgian VOC	Royal decree of May 2014 (C - 2014 / 24239)	5	Toluene equivalents	22%
EMICODE	March 2022	5	Toluene equivalents	22%
BREEAM NOR	BREEAM-NOR v6.0 New Construction (2022)	5	Toluene equivalents	22%
BREEAM International	BREEAM International New Construction v6.0 (2021)	5	Toluene equivalents	22%
LEED v4.1 BETA (outside U.S.)	February 2021	5	Compound Specific	22%
Blue Angel (DE-UZ 123)	January 2019	5	Compound Specific	22%

3.2 Specific Laboratory Sampling and Analyses

Procedure	External Method	Internal SOP	Quantification limit / sampling volume	Analytical principle	Uncertainty ^a [RSD(%)]
Sample preparation	ISO 16000-11:2006, EN 16516:2017+A1:2020, AgBB:2021, EMICODE:2022	71M549810	-	-	-
Emission chamber testing	ISO 16000-9:2006, EN 16516:2017+A1:2020	71M549811	-	Chamber and air control	-
Sampling of VOC	ISO 16000-6:2021, EN 16516:2017+A1:2020	71M549812	5 L	Tenax TA	-
Analysis of VOC	ISO 16000-6:2021, EN 16516:2017+A1:2020	71M542808B	1 μg/m³	ATD-GC/MS	10%
Sampling of aldehydes	ISO 16000-3:2011, EN 16516:2017+A1:2020	71M549812	35 L	DNPH	-
Analysis of aldehydes	ISO 16000-3:2011, EN 16516:2017+A1:2020	71M548400	3-6 μg/m³	HPLC-UV	10%
Sampling of phthalates*	ISO 16000-33:2017, MEL-09:2003	71M549812	60 L	XAD-2	-
Analysis of phthalates*	ISO 16000-33:2017	71M546060	0.6 μg/m³	GC/MS	10%





4 Test Parameters, Sample Preparation and Deviations

4.1 VOC Emission Chamber Test Parameters

Parameter	Value	Parameter	Value
Chamber volume, V[L]	119	Preconditioning period	-
Air Change rate, n[h-1]	0.5	Chamber test period	09/09/2022 - 07/10/2022
Area specific ventilation rate, q [m/h or m³/m²/h]	71	Analytical test period	09/09/2022 - 11/10/2022
Relative humidity of supply air, RH [%]	50 ± 3	Loading factor [m²/m³]	0.007
Temperature of supply air, T [°C]	23 ± 1	Test scenario	Very small area

4.2 Preparation of the Test Specimen

The sample was applied onto a glass plate and drawn off over a model giving a 3 mm thick and uniform layer with a broadness of 10 mm.

4.3 Picture of Sample



4.4 Deviations from Referenced Protocols and Regulations

No deviations from the referenced test methods were observed.





5 Results

5.1 VOC Emission Test Results after 3 Days

	CAS No.	Retention time	ID- Cat		Toluene eq.	Specific SER	R_D	R _B
		[min]	Cat	[µg/m³]	eq. [μg/m³]	[μg/(m²·h)]		
VOC with NIK/LCI								
1,2-Propandiol (Propylene glycol) *	57-55-6	3.50	1	8.4	< 5	600	0.0040	0.0040
Octamethylcyclotetrasiloxane e	556-67-2	8.55	1	23	45	1600	0.019	0.019
Decamethylcyclopentasiloxane *	541-02-6	10.61	1	24	40	1700	0.016	0.016
Dodecamethylcyclohexasiloxane *	540-97-6	12.49	1	9.5	9.3	680		0.0079
VOC without NIK/LCI								
1-(2-Aminophenyl)ethanone oxime	997071- 16-5	4.72	2	9.8	9.8	700		
Hexamethylcyclotrisiloxane * e	541-05-9	5.36	2	12	12	850		
Not identified *		6.51	4	39	39	2800		
Not identified *		6.65	4	140	140	10000		
Not identified *		7.64	4	13	13	930		
Not identified *		7.88	4	51	51	3600		
Tetradecamethylhexasiloxane *	107-52-8	13.30	2	29	29	2000		
Sum of VOC without NIK/LCI				300	300	21000		
VVOC compounds								
Not identified * a		1.87	4	32	32	2300		
TVVOC				32	32	2300		
SVOC compounds								
None determined								
TSVOC				< 5	< 5	< 400		
Carcinogens								
Total carcinogens				< 1	< 1	< 80		
Aldehydes								
Formaldehyde	50-00-0		1	< 3		< 300		
Acetaldehyde	75-07-0		1	< 3		< 300		
Propionaldehyde	123-38-6		1	< 3		< 300		
Butyraldehyde	123-72-8		1	< 3		< 300		
Acrolein *	107-02-8		1	< 5		< 400		
2-Butenal *	123-73-9		1	< 5		< 400		
Glutaraldehyde *	111-30-8		1	< 5		< 400		
Octanal *	124-13-0		1	< 5		< 400		

The results are only valid for the tested sample(s).

This report may only be copied or reprinted in its entity.







	CAS No.	Retention time	ID- Cat	-	Toluene eq.	Specific SER	R_D	R _B
		[min]		[µg/m³]	[µg/m³]	[µg/(m²·h)]		
Nonanal *	124-19-6		1	< 5		< 400		
Decanal *	112-31-2		1	< 5		< 400		
R-values							0.047	0.047
TVOC				360	390	26000		





5.2 VOC Emission Test Results after 28 Days

	CAS No.	Retention time	ID- Cat		Toluene eq.	Specific SER	R _D	R _B
		[min]		[µg/m³]	[µg/m³]	[µg/(m²·h)]		
VOC with NIK/LCI								
Dodecamethylcyclohexasiloxane *	540-97-6	12.48	1	6.2	6.1	440	0.0052	0.0052
VOC without NIK/LCI								
Tetradecamethylhexasiloxane *	107-52-8	13.29	2	34	34	2400		
Hexadecamethylheptasiloxane *	541-01-5	14.77	2	5.4	5.4	390		
Sum of VOC without NIK/LCI				39	39	2800		
VVOC compounds								
None determined								
TVVOC				< 5	< 5	< 400		
SVOC compounds								
None determined								
TSVOC				< 5	< 5	< 400		
Carcinogens								
Total carcinogens				< 1	< 1	< 80		
CMR (French reg.)								
Benzene	71-43-2		1	< 1		< 80		
Trichloroethylene	79-01-6		1	< 1		< 80		
Dibutylphthalate (DBP)*	84-74-2		1	< 1		< 80		
Diethylhexylphthalate (DEHP)*	117-81-7		1	< 1		< 80		
Aldehydes								
Formaldehyde	50-00-0		1	< 3		< 300		
Acetaldehyde	75-07-0		1	< 3		< 300		
Propionaldehyde	123-38-6		1	< 3		< 300		
Butyraldehyde	123-72-8		1	< 3		< 300		
Acrolein *	107-02-8		1	< 5		< 400		
2-Butenal *	123-73-9		1	< 5		< 400		
Glutaraldehyde *	111-30-8		1	< 5		< 400		
Octanal *	124-13-0		1	< 5		< 400		
Nonanal *	124-19-6		1	< 5		< 400		
Decanal *	112-31-2		1	< 5		< 400		
R-values							0.0052	0.0052
TVOC				46	46	3300		

The results are only valid for the tested sample(s).

This report may only be copied or reprinted in its entity.







	CAS No.	Retention time	ID- Cat	-	Toluene eq.	Specific SER	R _D	R _B
		[min]		[µg/m³]	[µg/m³]	[µg/(m²·h)]		
TVOC (French label)					48			
Toluene	108-88-3			< 2	< 2	< 200		
Tetrachloroethylene	127-18-4			< 2	< 2	< 200		
Ethylbenzene	100-41-4			< 2	< 2	< 200		
Xylene	1330-20-7			< 2	< 2	< 200		
Styrene	100-42-5			< 2	< 2	< 200		
2-Butoxyethanol	111-76-2			< 2	< 2	< 200		
1,2,4-Trimethylbenzene	95-63-6			< 2	< 2	< 200		
1,4-Dichlorobenzene	106-46-7			< 2	< 2	< 200		





6 Summary and Evaluation of the Results

6.1 Comparison with Limit Values of the French VOC Regulation

	CAS No.	Conc. 28 days	ÉMISSIONS DANS L'AIR INTÉRIEUR	EMISSIONS DANS L'AIR INTÉRIEUR	EMISSIONS DANS LIVE INTERIBUR-	EMISSIONS DANS L'AIR INTÉRIEUR
		μg/m³	µg/m³	µg/m³	μg/m³	µg/m³
TVOC	-	48	> 2000	< 2000	< 1500	< 1000
Formaldehyde	50-00-0	< 3	> 120	< 120	< 60	< 10
Acetaldehyde	75-07-0	< 3	> 400	< 400	< 300	< 200
Toluene	108-88-3	< 2	> 600	< 600	< 450	< 300
Tetrachloroethylene	127-18-4	< 2	> 500	< 500	< 350	< 250
Ethylbenzene	100-41-4	< 2	> 1500	< 1500	< 1000	< 750
Xylene	1330-20-7	< 2	> 400	< 400	< 300	< 200
Styrene	100-42-5	< 2	> 500	< 500	< 350	< 250
2-Butoxyethanol	111-76-2	< 2	> 2000	< 2000	< 1500	< 1000
1,2,4-Trimethylbenzene	95-63-6	< 2	> 2000	< 2000	< 1500	< 1000
1,4-Dichlorobenzene	106-46-7	< 2	> 120	< 120	< 90	< 60

The product was assigned a VOC emission class without taking into account the measurement uncertainty associated with the result. As specified in French Decree no. 2011-321 of March 23 2011, correct assignment of the VOC emission class is the sole responsibility of the party responsible for distribution of the product in the French market.

6.2 Comparison with Limit Values of the CMR Components

CMR (French reg.)	CAS No.	Conc. 28 days µg/m³	Max. allowed air concentration μg/m³
Benzene	71-43-2	< 1	< 1
Trichloroethylene	79-01-6	< 1	< 1
Dibutylphthalate (DBP)*	84-74-2	< 1	<1
Diethylhexylphthalate (DEHP)*	117-81-7	< 1	< 1





6.3 Comparison with Limit Values of the Italian CAM Regulation

	CAS No.	Conc. 28 days µg/m³	Limit value 28 days µg/m³
TVOC	-	48	< 1500
Formaldehyde	50-00-0	< 3	< 60
Acetaldehyde	75-07-0	< 3	< 300
Toluene	108-88-3	< 2	< 450
Tetrachloroethylene	127-18-4	< 2	< 350
Ethylbenzene	100-41-4	< 2	< 1000
Xylene	1330-20-7	< 2	< 300
Styrene	100-42-5	< 2	< 350
2-Butoxyethanol	111-76-2	< 2	< 1500
1,2,4-Trimethylbenzene	95-63-6	< 2	< 1500
1,4-Dichlorobenzene	106-46-7	< 2	< 90
Benzene	71-43-2	< 1	< 1
Trichloroethylene	79-01-6	< 1	< 1
Dibutylphthalate (DBP)*	84-74-2	< 1	< 1
Diethylhexylphthalate (DEHP)*	117-81-7	< 1	< 1

The product was assigned a VOC emission class without taking into account the measurement uncertainty associated with the result.





6.4 Comparison with Limit Values of AgBB/ABG

Parameter	Test after 3 days		Test after 28 days	
	Concentration mg/m³	Limit Value mg/m³	Concentration mg/m³	Limit Value mg/m³
TVOC	0.36	≤ 10	0.046	≤ 1.0
TSVOC	< 0.005	-	< 0.005	≤ 0.1
R-value (dimensionless)	0.047	-	0.0052	≤ 1
Sum of VOC without NIK/LCI	0.30	-	0.039	≤ 0.1
Formaldehyde	-	-	< 0.003	≤ 0.1
Total carcinogens	< 0.001	≤ 0.01	< 0.001	≤ 0.001

Compliance with the limits alone does not replace an approval or voluntary documentation by a Technical Assessment Body according to the Construction Product Regulation. This requires an application and approval. See www.eurofins.com/dibt-procedures.

6.5 Comparison with Limit Values of the Belgian Regulation

Parameter	Test after 28 days			
	Concentration µg/m³	Limit Value µg/m³		
TVOC (EN 16516)	46	≤ 1000		
TSVOC	< 5	≤ 100		
R-value (dimensionless)	0.0052	≤ 1		
Total carcinogens	< 1	≤ 1		
Toluene	< 5	≤ 300		
Formaldehyde	< 3	≤ 100		
Acetaldehyde	< 3	≤ 200		

6.6 Comparison with Limit Values of LEED v4.1 BETA

Parameter	Test after 28 days			
	ConcentrationLimit Valueμg/m³μg/m³			
TVOC	46	≤ 1000		
Sum of VOC without NIK/LCI	39	< 100		
Formaldehyde	< 3	≤ 10		
R-value (dimensionless)	0.0052	≤ 1		

This evaluation only concerns the emission requirements of LEED. In order to satisfy the credit on "Low-Emitting Material" according to the requirements of LEED v4.1 BETA, the product must also show compliance with the VOC content requirements.





6.7 Comparison with Limit Values of BREEAM NOR

Parameter	Concentration mg/m³	Basic Level mg/m³	Exemplary Level mg/m³
Formaldehyde 28 days	< 0.003	≤ 0.06	≤ 0.01
TVOC (EN 16516) 28 days	0.046	≤ 0.3	≤ 0.3
TSVOC 28 days	< 0.005	-	≤ 0.1
total carcinogens 28 days	< 0.001	≤ 0.001	≤ 0.001

6.8 Comparison with Limit Values of BREEAM International

Parameter	Concentration mg/m³	Basic Level mg/m³	Exemplary Level mg/m³
Formaldehyde 28 days	< 0.003	≤ 0.06	≤ 0.01
TVOC (EN 16516) 28 days	0.046	≤ 1.0	≤ 0.3
TSVOC 28 days	< 0.005	-	≤ 0.1
total carcinogens 28 days	< 0.001	≤ 0.001	≤ 0.001

6.9 Comparison with Limit Values of Indoor Air Comfort

	Test afte	Test after 3 days		28 days
	Concentration	Limit Value	Concentration	Limit Value
	μg/m³	μg/m³	μg/m³	µg/m³
TVOC (EN 16516)	390	≤ 10000	46	≤ 1000
TSVOC	< 5	-	< 5	≤ 100
R _D -value (NIK) (dimensionless)	0.047	-	0.0052	≤ 1
R _B -value (LCI) (dimensionless)	0.047	-	0.0052	≤ 1
Sum of VOC without NIK/LCI	300	-	39	≤ 100
Total carcinogens	< 1	≤ 10	-	-
Any individual carcinogens	-	-	< 1	≤ 1
CMR (French reg.)	-	-	< 1	≤ 1
Formaldehyde	< 3	-	< 3	≤ 60
Acetaldehyde	< 3	-	< 3	≤ 200
French A+/A	-	-	Comp	olies

Compliance with the limits alone does not entitle to use the Indoor Air Comfort label. This requires an application, site inspection, and approval. See www.eurofins.com/iac-procedures.





6.10 Comparison with Limit Values of Indoor Air Comfort Gold

	Test afte	Test after 3 days		28 days
	Concentration	Limit Value	Concentration	Limit Value
	μg/m³	µg/m³	μg/m³	µg/m³
TVOC (EN 16516)	390	≤ 750	46	≤ 20
Sum of VOC without NIK/LCI	300	-	39	≤ 40
TSVOC	< 5	-	< 5	≤ 30
R _D -value (NIK) (dimensionless)	0.047	-	0.0052	≤ 1
R _B -value (LCI) (dimensionless)	0.047	-	0.0052	≤ 1
Total carcinogens	< 1	≤ 10	-	-
Any individual carcinogens	-	-	< 1	≤ 1
CMR (French reg.)	-	-	< 1	< 1
Formaldehyde	< 3	≤ 50	< 3	< 10
Acetaldehyde	< 3	≤ 50	< 3	≤ 50
Sum Formaldehyde + Acetaldehyde [ppb]	< 5	≤ 50	-	-
French A+	-	-	Comp	olies

Compliance with the limits alone does not entitle to use the Indoor Air Comfort GOLD label. This requires an application, site inspection, and approval. See www.eurofins.com/iac-procedures.





6.11 Comparison with Limit Values of EMICODE

Parameter	Concentration µg/m³	EC 2 μg/m³	EC 1 μg/m³	EC 1 PLUS μg/m³
TVOC 3 days (EN 16516)	390	≤ 3000	≤ 1000	≤ 750
TVOC 28 days (EN 16516)	46	≤ 300	≤ 100	≤ 60
TSVOC 28 days (EN 16516)	< 5	≤ 100	≤ 50	≤ 40
Sum without NIK/LCI 28 days	39	> 40 ≤ 40		≤ 40
R-value 28 days (dimensionless)	0.0052	>1 ≤		≤ 1
Formaldehyde 3 days	< 3	≤ 50		
Acetaldehyde 3 days	< 3	≤ 50		
Sum Formaldehyde + Acetaldehyde [ppm]	< 0.005	≤ 0.05		
Sum carcinogens 3 days	< 1	≤ 10		
Sum carcinogens 28 days	< 1	≤ 1		

This test report does not alone entitle to use the protected trademark label EMICODE. For the use of an EMICODE label a license has to be applied for at the GEV, Düsseldorf, Germany. A license can only be granted for ready-to use products, if some additional requirements on contents of certain chemicals (e.g. solvent-free) are fulfilled.

6.12 Comparison with Limit Values of Blue Angel (DE-UZ 123)


•					
	Test after 3 days		Test afte	r 28 days	
	Concentration	Limit Value	Concentration	Limit Value	
	µg/m³	μg/m³	μg/m³	μg/m³	
TVOC	360	≤ 2000	46	≤ 300	
TSVOC	< 5	-	< 5	≤ 30	
R-value (dimensionless)	0.047	-	0.0052	≤ 1	
Sum of VOC without NIK/LCI	300	-	39	≤ 100	
Total carcinogens	< 1	≤ 10	-	-	
Any individual carcinogens	-	-	< 1	≤ 1	
Formaldehyde [ppm]	-	-	< 0.005	≤ 0.05	






7 Appendices

7.1 Chromatogram of VOC Emissions after 3 Days

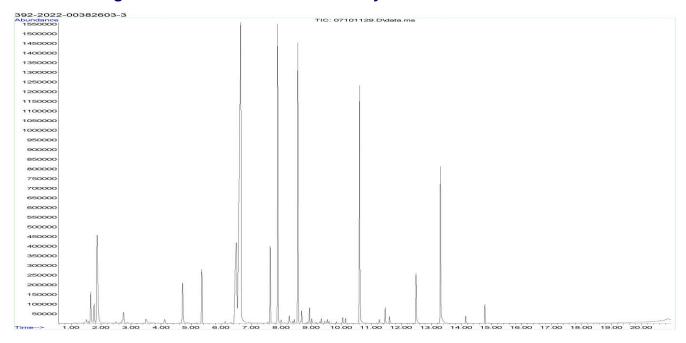

7.2 Chromatogram of VOC Emissions after 28 Days

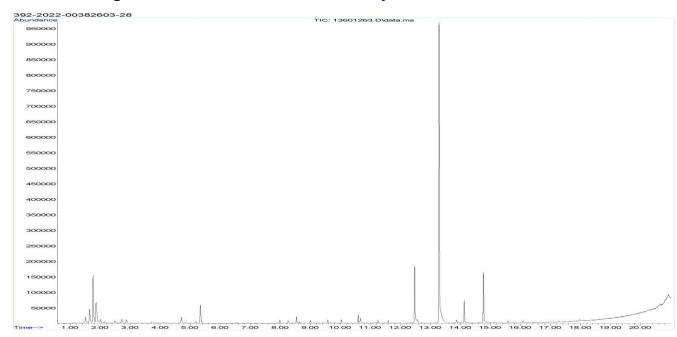

Please consider the different scales.

The results are only valid for the tested sample(s).

This report may only be copied or reprinted in its entity.





7.3 Sampling Report

Name of applicant: (name, company, phone): Production plant, where sampling takes place	Sika Services AGTüffenwies 16 8048 ZürichSwitzerlandJulia Endress+41 79 919 17 75 Sika Engineering Silicones s.r.l.	Producer (if different from company's name at place of sampling): Sampler * (Please mark): (name, company, phone):	Andrea Sinatra Andrea Sinatra Sika Engineering Silicones s.r.l., +39 3386756426
Name of the product	:: Sikasil WS-605	Type of product	1K Silicone
Model / Program / Series:		Batch N°:	3006532146
Article N°:	107625	Date of batch production:	22/08/2022
Sample was taken from	☐ ongoing production ☐ stocks ☐ retained sample	Date of sampling: Time of sampling:	29/08/2022 09:00
Where had the product been stored prior to sampling?	production store miscellaneous	How had the product been stored prior to sampling?	☐ open ☐ in the stack ☑ wrapped up
Place of storage:	Warehouse	Packing material:	Unipacs
contamination where	egative influences by air sample was taken, by petrol emissions from production; any uestions, etc).		4
Cut edges (identificati exposed in the emissi	ion of cut edges when present an ion test):	d identification of new surf	aces and surface to be
	onfirms the correctness of the data		e was selected, drawn and
Date: 30/08/2022	Signature: (Stamp)	- ASSICURAZIO	ONE QUALITA'





7.4 How to Understand the Results

7.4.1 Acronyms Used in the Report

- < Means less than
- > Means bigger than
- * Not a part of our accreditation
- Please see section regarding uncertainty in the Appendices
- § Deviation from method. Please see deviation section
- a The method is not optimal for very volatile compounds. For these substances smaller results and a higher measurement uncertainty cannot be ruled out
- b The component originates from the substrate and is thus removed
- c The results have been corrected by the emission from the substrate
- d Very polar organic compounds are not suitable for reliable quantification using Tenax TA adsorbent and HP-5ms GC column. A high degree of uncertainty must be expected
- e The component may be overestimated due to contribution from the system
- SER Specific Emission Rate

7.4.2 Explanation of ID Category

Categories of Identity:

- 1: Identified by comparison with a mass spectrum obtained from library and supported by other information and quantified through specific calibration.
- 2: Identified by comparison with a mass spectrum obtained from library and supported by other information. Quantified as toluene equivalent.
- 3: Identified with a lower match by comparison with a mass spectrum obtained from a library. Quantified as toluene equivalent.
- 4: Not identified, quantified as toluene equivalent.





7.5 Applied LCI and NIK Values

7.5.1 LCI/NIK Values for Compounds found after 3 Day Measurements

Compound	CAS No.	AgBB 2021 NIK [µg/m³]	Belgian NIK [µg/m³]
1,2-Propandiol (Propylene glycol) *	57-55-6	2100	2100
Octamethylcyclotetrasiloxane	556-67-2	1200	1200
Decamethylcyclopentasiloxane *	541-02-6	1500	1500
Dodecamethylcyclohexasiloxane *	540-97-6	1200	1200

7.5.2 LCI/NIK Values for Compounds found after 28 Day Measurements

Compound	CAS No.	AgBB 2021 NIK	Belgian NIK
		[µg/m³]	[µg/m³]
Dodecamethylcyclohexasiloxane *	540-97-6	1200	1200





7.6 Description of VOC Emission Test

7.6.1 Test Chamber

The test chamber is made of stainless steel. A multi-step air clean-up is performed before loading the chamber, and a blank check of the empty chamber is performed.

The chamber operation parameters are as described in the test method section. (EN 16516, ISO 16000-9, internal method no.: 71M549811).

7.6.2 Expression of the Test Results

All test results are calculated as specific emission rate, and as extrapolated air concentration in the European Reference Room (EN 16516, AgBB, EMICODE, M1 and Indoor Air Comfort).

7.6.3 Testing of Carcinogenic VOCs

The emission of carcinogens (EU Categories C1A and C1B, as per European law) is tested by drawing sample air from the test chamber outlet through Tenax TA tubes after the specified duration of storage in the ventilated test chamber. Analysis is performed by ATD-GC/MS (automated thermal desorption coupled with gas chromatography and mass spectroscopy using 30 m HP-5 (slightly polar) column with 0.25 mm ID and 0.25 µm film, Agilent) (EN 16516, ISO 16000-6, internal methods no.: 71M549812 / 71M542808B).

All identified carcinogenic VOCs are listed; if a carcinogenic VOC is not listed then it has not been detected. Quantification is performed using the TIC signal and authentic response factors, or the relative response factors relative to toluene for the individual compounds.

This test only covers substances that can be adsorbed on Tenax TA and can be thermally desorbed. If other emissions occur, then these substances cannot be detected (or with limited reliability only).

7.6.4 Testing of VOC, SVOC and VVOC

The emissions of volatile organic compounds are tested by drawing sample air from the test chamber outlet through Tenax TA tubes after the specified duration of storage in the ventilated test chamber. Analysis is performed by ATD-GC/MS using HP-5 column (30 m, 0.25mm ID, 0.25µm film) (EN 16516, ISO 16000-6, internal methods no.: 71M549812 / 71M542808B).

All single substances that are listed with a LCI/NIK value in the latest publications (hereafter referred to as target compounds) are identified if present. All other appearing VOCs are identified as far as possible. Quantification of target compounds is done using the TIC signal and authentic response factors, or the relative response factors relative to toluene. For certain compound groups, which differ significantly in chemistry from toluene, quantification is performed relative to a representative member of the group for more accurate and precise results. This can include quantification of for example glycols and acids. In addition to that, all results are also expressed in toluene equivalents. All non-target compounds, as well as all non-identified substances, are quantified in toluene equivalents.

The results of the individual substances are calculated in three groups depending on their retention time when analyzing using a non-polar column (HP-1):

- Volatile Organic Compounds (VOC) are defined as: All substances eluting between and including n-hexane (n-C6) and n-hexadecane (n-C16)
- Semi-Volatile Organic Compounds (SVOC) are defined as: All substances eluting after n-hexadecane (n-C16) and before and including n-docosane (n-C22)
- Very Volatile Organic Compounds (VVOC) are defined as: All substances eluting before n-hexane (n-C6).





Total Volatile Organic Compounds (TVOC) is calculated by summation of all individual VOCs with a concentration $\geq 5~\mu g/m^3$. The TVOC can be expressed either in toluene equivalents as defined in EN 16516 and similar to ISO 16000-6, or as the sum of concentrations using specific or relative response factors. In the case of summation of concentrations using authentic or relative response factors, the toluene equivalent is applied to all non-target and non-identified VOCs before summing up. Compounds regarded as VOC in line with the above definition but elute before n-C6 or after n-C16 on the HP-5 column are treated as VOC, and are thus added to the TVOC.

Total Semi-Volatile Organic Compounds (TSVOC) is calculated by the summation of all individual SVOCs expressed in toluene equivalents with a concentration $\geq 5~\mu g/m^3$, as defined in EN 16516. VOCs that are regarded as VOC in line with the above definition, but elute after n-C16 in this test, are not added to the TSVOC.

Total Very Volatile Organic Compounds (TVVOC) is calculated by the summation of all individual VVOCs with a concentration $\geq 5 \,\mu\text{g/m}^3$ and expressed in toluene equivalents. VOCs that are regarded as VOC in line with the above definition, but elute before n-C6 in this test, are not added to the TVVOC.

This test only covers substances which can be adsorbed on Tenax TA and can be thermally desorbed. If emissions of substances outside these specifications occur then these substances cannot be detected (or with limited reliability only).

7.6.5 Calculation of R Values with LCI Lists

The concentrations of detected compounds $\geq 5~\mu g/m^3$ are divided by their respective LCI/NIK value (if defined in the given publication). The sum of the quotients gives the R value, which can be mathematically expressed:

$$R = \sum_{i}^{n} \left(c_{i} / NIK_{i} + ... + c_{n} / NIK_{n} \right)$$

This R value is calculated, depending on the purpose of this test, for the European LCI list, for the German LCI/NIK list (R_D) , and/or for the Belgian LCI list (R_B) .

All VOCs without published LCI/NIK value and concentration $\geq 5 \,\mu g/m^3$ are summed up as sum of VOCs without LCI/NIK if required by the standard or protocol.

7.6.6 Testing of Aldehydes

The presence of aldehydes is tested by drawing air samples from the test chamber outlet through DNPH-coated silicagel tubes after the specified duration of storage in the ventilated test chamber. Analysis is performed by solvent desorption and subsequently by HPLC and UV-/diode array detection.

The absence of formaldehyde and other aldehydes is stated if UV detector response at the specific wavelength is lacking at the specific retention time in the chromatogram. Otherwise it is checked whether the reporting limit is exceeded. In this case the identity is finally checked by comparing full scan sample UV spectra with full scan standard UV spectra.

7.6.7 Testing of Phthalates

The presence of phthalates is tested by drawing air samples from the test chamber outlet through tube with XAD-II adsorbent after the specified duration of storage in the ventilated test chamber. Analysis is performed by solvent desorption and subsequently by GC/MS. Analysis of phthalates is not currently covered by the accreditation (Internal methods no.: 71M549812 / 71M546060).





7.7 Quality Assurance

Before loading the test chamber, a blank check of the empty chamber is performed and compliance with background concentrations in accordance with EN 16516 / ISO 16000-9 is determined.

Air sampling at the chamber outlet and subsequent analysis is performed in duplicate. Relative humidity, temperature and air change rate in the chambers is logged every 5 minutes and checked daily. A double determination is performed on random samples at a regular interval and results are registered in a control chart to ensure the uncertainty and reproducibility of the method.

The stability of the analytical system is checked by a general function test of device and column, and by use of control charts for monitoring the response of individual substances prior to each analytical sequence.

7.8 Accreditation

The testing methods described above are accredited on line with EN ISO/IEC 17025 by DANAK (no. 522). This accreditation is valid worldwide due to mutual approvals of the national accreditation bodies (ILAC/IAF, see also www.eurofins.com/galten.aspx#accreditation).

Not all parameters are covered by this accreditation. The accreditation does not cover parameters marked with an asterisk (*), however analysis of these parameters is conducted at the same level of quality as for the accredited parameters.

7.9 Uncertainty of the Test Method

The relative standard deviation of the overall analysis is 22%. The expanded uncertainty Um equals 2 x RSD. For further information please visit www.eurofins.dk/uncertainty.

7.10 Decision Rules

Eurofins Product Testing A/S, declare statement of conformity based on the "Binary Statement for Simple Acceptance Rule" described in ILAC's "Guidelines on decision Rules and Statements of Conformity" ILAC-G8:09/2019.

This means that results above the detection limit are always reported with two significant digits. Results are evaluated with the same number of significant digits as the corresponding limit values, and conformity is based on results being less than or equal to limit values.

For limit values with more than two significant digits, the third digit will be used to confirm whether a result is below or equal to the limit value. It will always be indicated in the evaluation table if this expanded evaluation is performed.

For further information, please visit www.eurofins.dk/product-testing/om-os/beslutningsregler/

7.11 Version History

Report date	Report number	Modification
12/10/2022	392-2022-00382603_A_EN	Current version